

## Procedure to install & test FuelDirect 057.007.051 (and up) prior to making a drive image for deployment

This procedure must be followed for customers that create a disk image in their lab that will later be loaded onto a disk for deployment of a live system. Failure to follow these steps will cause issues for the deployed images.

Procedure:

- Install FuelDirect Software
- **DO NOT RUN LicenseUtility.exe. This will cause problems with future deployment images.**
- Call or email PIE (contact information below)
  - Let PIE know what you are setting up, and you will be given a GP Code that will give you 15 days to do any testing necessary before making a drive image.
- Run FuelDirect.exe from the FuelDirect directory
  - Select DIAGNOSTICS from the top of the window
    - Press “S” and you will be given an Access Code (37 for example)
      - To calculate the Security Code: 100 minus <Access Code>, then reverse the digits [100 - 37 = 63]  
The Security Code for this example is 36
      - Type in the Security Code and press Enter
    - Press “A” and enter the GP Code at the prompt, then press Enter
      - You should see “Code Accepted”
  - In the FuelDirect window, select FILE / EXIT to close FuelDirect (Diagnostics will close also)
- Do any setup and testing necessary.
  - If you need more than 15 days, you can contact PIE for another code

### Note:

If you will not be testing or running FuelDirect prior to creating a drive image, there is no need to get the GP Code.

Progressive International Electronics, Inc  
1106-G Great Falls Court  
Knightdale, NC 27545 USA  
919-266-4442  
[corp1@pie-corp.com](mailto:corp1@pie-corp.com)